



PRODUCT ASSEMBLY INSTRUCTIONS:




www.wavearmor.net

Item # | Product Name: #301308 SLX to Floating Dock- Short Attachment

| Parts List: | Tools Needed: |
|---|-------------------|
| 1. Top Connection qty 2 | 1. Ratchet |
| 2. Bottom Connection qty 2 | 2. Long Extension |
| 3. U-channel Connection Brackets (19.75") qty 2 | 3. 9/16" socket |
| 4. 3/8 washer qty 2 | 4. 3/4" socket |
| 5. 3/8 x 1 1/2" Bolt qty 6 | 5. 3/4" wrench |
| 6. 1/2 x 7" Galvanized Bolt qty 2 | 6. |
| 7. 1/2" Galvanized Washer qty 4 | 7. |
| 8. 1/2" Galvanized Jam Nut qty 4 | 8. |
| 9. | 9. |
| 10. | 10. |

Assembly Instructions


Parts included.

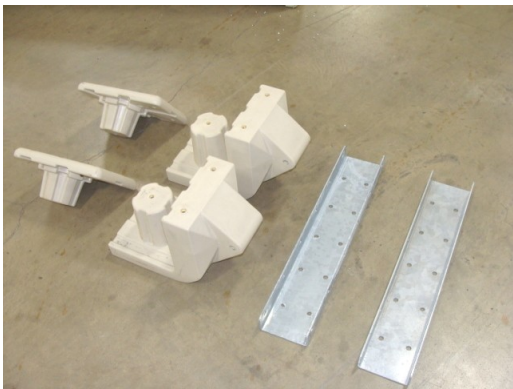



1. Align bottom connectors with the post holes at the front of the SLX Port. Then slide them into the post holes.



2. Insert top connection piece into post hole and secure to bottom connection using the 3/8 x 1 1/2 bolts and washers in three locations. Repeat on the other side.

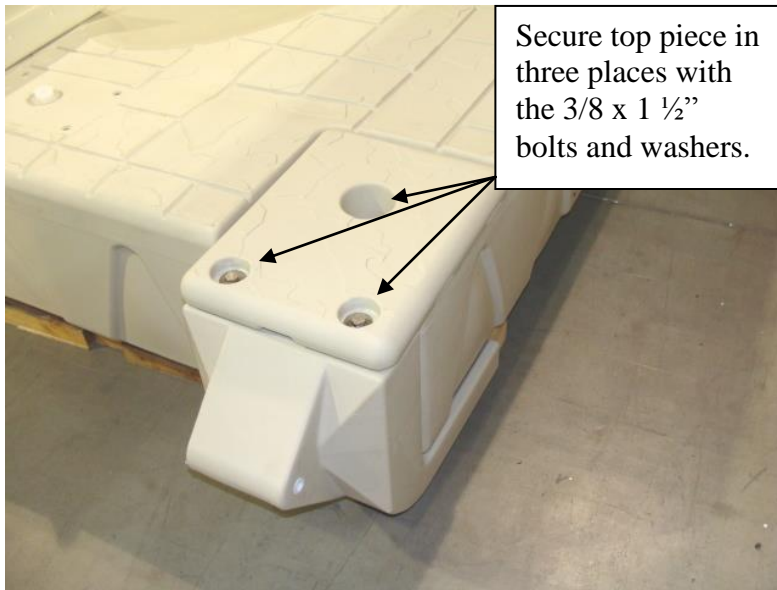

3. Attach the U-channel connections to the dock using bolts or lag bolts depending on the dock it is being fastened to. We recommend using 1/2" diameter bolts to secure the u-channel. The holes in the back of the u-channel should be closer to the top. Make sure the spacing between the u-channels is correct so the port will fit into them.
4. Attach u-channel to the front of the connector using the 1/2 x 7" galvanized bolt, two washers and two jam nuts. Tighten the jam nuts against each other to prevent them from coming loose. The port should be level when attached to the u-channel.

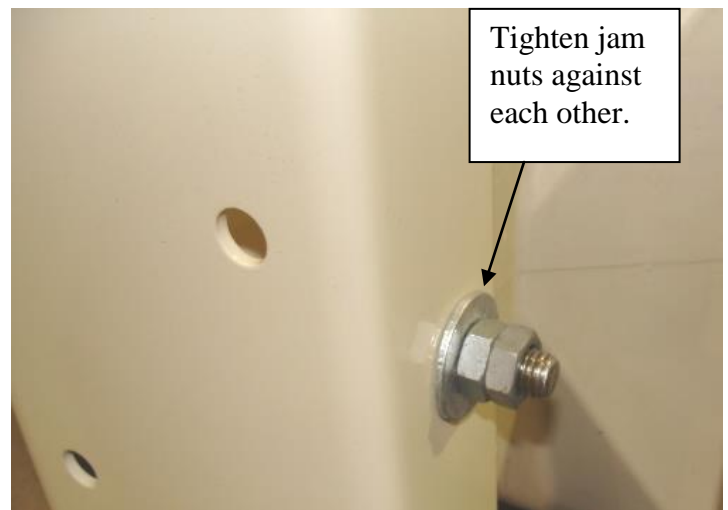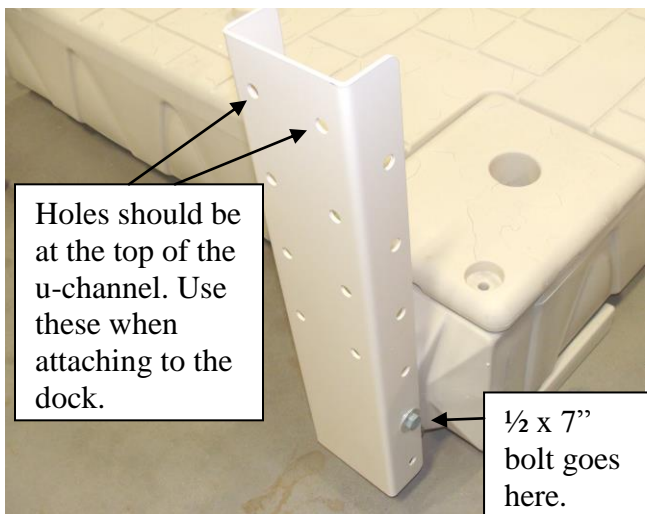

5. Completed unit.

